

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

| | |
|---|------|
| HOW TO USE THIS MANUAL | 1-2 |
| BOATING SAFETY | 1-4 |
| BOATING EQUIPMENT (NOT REQUIRED BUT RECOMMENDED) | 1-10 |
| SAFETY IN SERVICE | 1-13 |
| TROUBLESHOOTING | 1-13 |
| SHOP EQUIPMENT | 1-17 |
| TOOLS | 1-19 |
| FASTENERS, MEASUREMENT, AND CONVERSIONS | 1-26 |
| SPECIFICATIONS | 1-28 |

2

MAINTENANCE & TUNE-UP

| | |
|---------------------------------------|------|
| GENERAL INFORMATION | 2-2 |
| LUBRICATION SERVICE | 2-5 |
| ENGINE MAINTENANCE | 2-9 |
| BOAT MAINTENANCE | 2-26 |
| TUNE-UP | 2-30 |
| TIMING AND SYNCHRONIZATION | 2-37 |
| STORAGE (WHAT TO DO BEFORE AND AFTER) | 2-43 |
| CLEARING A SUBMERGED MOTOR | 2-47 |
| SPECIFICATIONS | 2-48 |

3

FUEL & IGNITION SYSTEMS

| | |
|---|------|
| FUEL SYSTEM BASICS | 3-2 |
| FUEL TANK AND LINES | 3-6 |
| FICHT FUEL INJECTION (DI/FFI) & IGNITION SYSTEM | 3-11 |
| E-TEC FUEL INJECTION & IGNITION SYSTEM | 3-54 |
| SPECIFICATIONS | 3-92 |

4

ELECTRICAL SYSTEMS

| | |
|-----------------------------------|------|
| UNDERSTANDING AND TROUBLESHOOTING | |
| ELECTRICAL SYSTEMS | 4-2 |
| CHARGING CIRCUIT | 4-8 |
| STARTING CIRCUIT | 4-18 |
| WARNING SYSTEM | 4-35 |
| WIRING DIAGRAMS | 4-38 |
| SPECIFICATIONS | 4-60 |

5

LUBRICATION & COOLING

| | |
|---------------------------------------|------|
| OIL INJECTION SYSTEM- DI/FICHT MOTORS | 5-2 |
| OIL INJECTION SYSTEM - E-TEC MOTORS | 5-10 |
| COOLING SYSTEM | 5-18 |
| SPECIFICATIONS | 5-38 |

CONTENTS

POWERHEAD 6-2
POWERHEAD BREAK-IN 6-29
POWERHEAD EXPLODED VIEWS 6-30
SPECIFICATIONS 6-38

POWERHEAD

6

GEARCASE 7-2

LOWER UNIT

7

TRIM/TILT SYSTEMS 8-2

TRIM & TILT

8

REMOTE CONTROLS 9-2
CONTROL CABLES 9-16

REMOTE CONTROLS

9

HAND REWIND STARTER 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-7

MASTER INDEX

| | |
|--|--|
| <p>WHERE TO BEGIN 1-2</p> <p>IGNITION COILS</p> <p> E-TEC 3-87</p> <p> FICHT 3-46</p> <p>IGNITION TIMING</p> <p> CHECKING 2-43</p> <p>IMPELLER 5-25</p> <p> GENERAL INFORMATION 5-25</p> <p> INSPECTION & OVERHAUL 5-29</p> <p> REMOVAL & INSTALLATION 5-25</p> <p>INTAKE MANIFOLD AND LEAF VALVE 6-27</p> <p> REMOVAL, INSPECTION & INSTALLATION 6-27</p> <p>LINKAGE, CABLES AND SHAFTS 2-7</p> <p> LUBRICATION 2-7</p> <p> RECOMMENDED LUBRICANT 2-7</p> <p>LOW PRESSURE FUEL PUMP (LIFT PUMP)</p> <p> E-TEC 3-76</p> <p> FICHT 3-34</p> <p>LOWER UNIT (GEARCASE) OIL 2-17</p> <p> CHECKING OIL LEVEL & CONDITION 2-17</p> <p> DRAINING AND FILLING 2-18</p> <p> GENERAL INFORMATION 2-17</p> <p> OIL RECOMMENDATIONS 2-17</p> <p>LUBRICATION SERVICE 2-5</p> <p> ELECTRIC STARTER MOTOR PINION 2-5</p> <p> ENGINE COVER LATCHES 2-6</p> <p> GENERAL INFORMATION 2-5</p> <p> LINKAGE, CABLES AND SHAFTS 2-7</p> <p> POWER TRIM/TILT RESERVOIR 2-6</p> <p> STEERING ARM 2-8</p> <p> SWIVEL BRACKET AND TILT SUPPORT 2-8</p> <p> TILT TUBE ASSEMBLY 2-9</p> <p> MANUAL STARTER ASSEMBLY 10-2</p> <p> DISASSEMBLY & ASSEMBLY 10-4</p> <p> GENERAL INFORMATION 10-2</p> <p> MANUAL STARTER SERVICE 10-2</p> <p> REMOVAL & INSTALLATION 10-2</p> <p>OIL COMPONENT ASSEMBLY</p> <p> E-TEC 5-15</p> <p> FICHT 5-7</p> <p>OIL FILTER 2-26</p> <p> GENERAL INFORMATION 2-26</p> <p> INSPECTOR & SERVICE 2-26</p> <p>OIL INJECTION SYSTEM - DI/FICHT 5-2</p> <p> DESCRIPTION AND OPERATION 5-2</p> <p> GENERAL INFORMATION 5-2</p> <p> OIL COMPONENT ASSEMBLY 5-7</p> <p> OIL RECIRCULATION SYSTEM DIAGRAMS 5-9</p> <p> TROUBLESHOOTING 5-3</p> <p>OIL INJECTION SYSTEM - E-TEC 5-10</p> <p> DESCRIPTION AND OPERATION 5-10</p> <p> GENERAL INFORMATION 5-10</p> <p> OIL COMPONENT ASSEMBLY 5-15</p> <p> OIL RECIRCULATION SYSTEM DIAGRAMS 5-17</p> <p> TROUBLESHOOTING 5-11</p> <p>OIL RECIRCULATION SYSTEM DIAGRAMS</p> <p> E-TEC 5-17</p> <p> FICHT 5-9</p> <p>POWER TRIM/TILT RESERVOIR 2-6</p> <p> CHECKING FLUID LEVEL/CONDITION 2-7</p> <p> RECOMMENDED LUBRICANT 2-6</p> <p>POWERHEAD 6-5</p> <p> ASSEMBLY 6-14</p> <p> CLEANING & INSPECTION 6-20</p> <p> DISASSEMBLY 6-10</p> <p> REMOVAL & INSTALLATION 6-5</p> <p>POWERHEAD 6-2</p> <p> FLYWHEEL 6-3</p> <p> FLYWHEEL COVER 6-2</p> <p> GENERAL INFORMATION 6-2</p> <p> INTAKE MANIFOLD & LEAF VALVE 6-27</p> <p> POWERHEAD 6-5</p> <p>POWERHEAD BREAK-IN 6-29</p> <p> GENERAL INFORMATION 6-29</p> <p>POWERHEAD EXPLODED VIEWS 6-30</p> | <p>PRE-WIRED BINNACLE MOUNT REMOTE 9-12</p> <p> OVERHAUL 9-12</p> <p>PRESSURE RELIEF VALVE 5-24</p> <p> REMOVAL & INSTALLATION 5-24</p> <p>PRESSURE (EP AND BP) SENSOR</p> <p> E-TEC 3-90</p> <p> FICHT 3-49</p> <p>PROPELLER 2-22</p> <p> GENERAL INFORMATION 2-22</p> <p> INSPECTION 2-22</p> <p> REMOVAL & INSTALLATION 2-23</p> <p>PROPELLER SHAFT SEAL 7-38</p> <p> GENERAL INFORMATION 7-38</p> <p> REPLACEMENT 7-38</p> <p>RE-COMMISSIONING 2-46</p> <p>REMOTE CONTROLS 9-2</p> <p> CONCEALED SIDE MOUNT REMOTE UNITS 9-9</p> <p> DESCRIPTION AND OPERATION 9-2</p> <p> DUAL HANDLE SURFACE MOUNT REMOTE UNITS FOR SINGLE MOTORS 9-8</p> <p> INTRODUCTION 9-2</p> <p> PRE-WIRED BINNACLE MOUNT REMOTE UNITS 9-12</p> <p> SMALL MOTOR STANDARD SURFACE REMOTE UNITS 9-6</p> <p> STANDARD SURFACE MOUNT REMOTE UNITS 9-3</p> <p>SAFETY IN SERVICE 1-13</p> <p> DO'S 1-13</p> <p> DON'TS 1-13</p> <p>SELF-DIAGNOSTIC SYSTEM - E-TEC 3-59</p> <p> LED DIAGNOSTICS 3-59</p> <p> TROUBLE CODES 3-60</p> <p>SELF-DIAGNOSTIC SYSTEM - FICHT 3-17</p> <p> TROUBLE CODES 3-17</p> <p> READING CODES 3-17</p> <p> MANUALLY CLEARING CODES 3-19</p> <p>SHIFT INTERRUPT SWITCH</p> <p> E-TEC 3-89</p> <p> FICHT 3-49</p> <p>SHOP EQUIPMENT 1-17</p> <p> CHEMICALS 1-17</p> <p> SAFETY TOOLS 1-17</p> <p>SMALL MOTOR STANDARD SURFACE REMOTE 9-6</p> <p> OVERHAUL 9-6</p> <p>SPARK PLUG WIRES 2-36</p> <p> REMOVAL & INSTALLATION 2-37</p> <p> TESTING 2-36</p> <p>SPARK PLUGS 2-32</p> <p> GENERAL INFORMATION 2-32</p> <p> INSPECTION & GAPPING 2-36</p> <p> HEAT RANGE 2-32</p> <p> READING SPARK PLUGS 2-34</p> <p> REMOVAL & INSTALLATION 2-32</p> <p>SPECIFICATIONS</p> <p> CAPACITIES 2-52</p> <p> CONVERSION FACTORS 1-28</p> <p> COOLING SYSTEM 5-38</p> <p> ENGINE - 40-90 HP 2/3-CYL E-TEC 6-38</p> <p> ENGINE - 75-115 HP DI/FICHT V4 6-39</p> <p> ENGINE - 135-175 HP DI/FICHT V6 6-39</p> <p> ENGINE - 200-250 HP DI/FICHT & E-TEC V6 6-40</p> <p> GENERAL ENGINE 2-49</p> <p> GENERAL ENGINE SYSTEM 2-49</p> <p> IGNITION & INJECTOR SENSOR TESTING 3-92</p> <p> LUBRICATION SERVICES 2-51</p> <p> MAINTENANCE INTERVALS</p> <p> METRIC BOLTS - TYPICAL TORQUE VALUES 1-30</p> <p> SPARK PLUG DIAGNOSIS 2-54</p> <p> STATOR TESTING 4-60</p> <p> TUNE-UP 2-53</p> <p> TWO-STROKE MOTOR FUEL:OIL RATIO 2-48</p> <p> U.S. STANDARD BOLTS - TYPICAL TORQUE VALUES 1-29</p> <p>STANDARD SURFACE MOUNT REMOTE</p> <p> OVERHAUL 9-3</p> <p>START CIRCUIT SWITCHES 4-22</p> <p>STARTER MOTOR 4-24</p> <p> CLEANING & INSPECTION 4-32</p> |
|--|--|

10-10 MASTER INDEX

| | | | |
|--|-------------|---|-------------|
| GENERAL INFORMATION | 4-24 | REMOVAL & INSTALLATION | 8-13 |
| REMOVAL & INSTALLATION | 4-26 | TRIM/TILT SYSTEMS | 8-2 |
| OVERHAUL | 4-27 | DESCRIPTION & OPERATION | 8-3 |
| STARTER MOTOR SOLENOID/RELAY SWITCH | 4-34 | INTRODUCTION | 8-2 |
| GENERAL INFORMATION | 4-34 | SYSTEM IDENTIFICATION | 8-2 |
| REMOVAL & INSTALLATION | 4-35 | TILT LIMIT SWITCH | 8-10 |
| TESTING THE SOLENOID | 4-34 | TRIM SENDING UNIT | 8-11 |
| STARTING CIRCUIT | 4-18 | TRIM/TILT ASSEMBLY -1-RAM | 8-12 |
| DI/FICHT STARTER CIRCUIT | 4-19 | TRIM/TILT ASSEMBLY -3-RAM | 8-13 |
| E-TEC STARTER CIRCUIT | 4-21 | TROUBLESHOOTING | 8-5 |
| ELECTRIC STARTER BASICS | 4-18 | TROUBLESHOOTING | |
| START CIRCUIT SWITCHES | 4-22 | 2-STROKE MOTORS | 1-14 |
| STARTER MOTOR | 4-24 | 4-STROKE MOTORS | 1-16 |
| STARTER MOTOR SOLENOID/RELAY SWITCH | 4-34 | BASIC OPERATING PRINCIPLES | 1-13 |
| STATOR/BATTERY CHARGE COIL | 4-12 | CHARGING SYSTEM | 4-9 |
| GENERAL INFORMATION | 4-12 | COMBUSTION | 1-16 |
| REMOVING & INSTALLATION | 4-15 | COOLING SYSTEM | 5-19 |
| STEERING ARM | 2-8 | E-TEC FUEL SYSTEM | 3-57 |
| LUBRICATION | 2-8 | E-TEC OIL SYSTEM | 5-11 |
| RECOMMENDED LUBRICANT | 2-8 | ELECTRICAL SYSTEMS | 4-6 |
| STORAGE (WHAT TO DO BEFORE AND AFTER) | 2-43 | FICHT FUEL SYSTEM | 3-14 |
| RE-COMMISSIONING | 2-46 | FICHT OIL SYSTEM | 5-3 |
| WINTERIZATION | 2-43 | GEARCASE | 7-3 |
| SWIVEL BRACKET AND TILT SUPPORT | 2-8 | TRIM/TILT | 8-5 |
| LUBRICATION | 2-8 | WARNING SYSTEM | 4-36 |
| RECOMMENDED LUBRICANT | 2-8 | TUNE-UP | 2-30 |
| TEMPERATURE SENSORS/SWITCHES | | COMPRESSION CHECK | 2-31 |
| E-TEC | 3-84 | IGNITION SYSTEM MAINTENANCE | 2-37 |
| FICHT | 3-43 | INTRODUCTION | 2-30 |
| THERMOSTAT | 5-22 | SPARK PLUG WIRES | 2-36 |
| GENERAL INFORMATION | 5-22 | SPARK PLUGS | 2-32 |
| REMOVAL & INSTALLATION | 5-22 | TUNE-UP SEQUENCE | 2-30 |
| THROTTLE BODY | | TUNE-UP SEQUENCE | 2-30 |
| E-TEC | 3-75 | UNDERSTANDING AND TROUBLESHOOTING ELECTRICAL SYSTEMS . 4-2 | |
| FICHT | 3-33 | BASIC ELECTRICAL THEORY | 4-2 |
| THROTTLE PLATE SYNCHRONIZATION | | ELECTRICAL COMPONENTS | 4-2 |
| (DI/FICHT ONLY) | 2-38 | ELECTRICAL SYSTEM PRECAUTIONS | 4-8 |
| THROTTLE POSITION (TP) SENSOR | | ELECTRICAL TESTING | 4-6 |
| E-TEC | 3-86 | TEST EQUIPMENT | 4-4 |
| FICHT | 3-45 | TROUBLESHOOTING ELECTRICAL SYSTEMS | 4-6 |
| TILT LIMIT SWITCH | 8-10 | WIRE AND CONNECTOR REPAIR | 4-8 |
| ADJUSTMENT | 8-10 | VST ASSEMBLY | |
| GENERAL INFORMATION | 8-10 | E-TEC | 3-79 |
| TILT TUBE ASSEMBLY | 2-9 | FICHT | 3-37 |
| LUBRICATION | 2-9 | WARNING SYSTEM | 4-35 |
| RECOMMENDED LUBRICANT | 2-9 | DESCRIPTION AND OPERATION | 4-35 |
| TIMING AND SYNCHRONIZATION | 2-37 | ENGINE TEMPERATURE SENSORS/SWITCHES | 4-37 |
| DI (FICHT) AND E-TEC MOTORS | 2-38 | TROUBLESHOOTING | 4-36 |
| GENERAL INFORMATION | 2-37 | WATER PRESSURE CONNECTION | |
| TIMING POINTER | 2-42 | INLINE E-TEC MODELS | 5-25 |
| TOOLS | 1-19 | WATER PUMP AND IMPELLER | 5-25 |
| ELECTRONIC TOOLS | 1-24 | GENERAL INFORMATION | 5-25 |
| HAND TOOLS | 1-19 | INSPECTION & OVERHAUL | 5-29 |
| MEASURING TOOLS | 1-25 | REMOVAL & INSTALLATION | 5-25 |
| OTHER COMMON TOOLS | 1-23 | WINTERIZATION | 2-43 |
| SPECIAL TOOLS | 1-23 | GENERAL INFORMATION | 2-43 |
| TRIM SENDING UNIT | 8-11 | PREPPING FOR STORAGE | 2-44 |
| ADJUSTMENT | 8-11 | STORAGE CHECKLIST | 2-44 |
| TRIM/TILT ASSEMBLY -1-RAM SYSTEMS | 8-12 | WHERE TO STORE YOUR BOAT AND MOTOR | 2-44 |
| REMOVAL & INSTALLATION | 8-12 | WIRING & HARNESSSES | 4-4 |
| TRIM/TILT ASSEMBLY -3-RAM SYSTEMS | 8-13 | TEST EQUIPMENT | 4-4 |
| ASSEMBLY | 8-18 | WIRING DIAGRAMS | 4-38 |
| CLEANING AND INSPECTION | 8-18 | INDEX | 4-38 |
| DISASSEMBLY | 8-15 | ZINCS | 2-24 |
| | | GENERAL INFORMATION | 2-24 |
| | | INSPECTION | 2-24 |
| | | SERVICE | 2-25 |