

CONTENTS

1

GENERAL INFORMATION, SAFETY AND TOOLS

HOW TO USE THIS MANUAL	1-2
BOATING SAFETY	1-4
BOATING EQUIPMENT	1-10
SAFETY IN SERVICE	1-13
TROUBLESHOOTING	1-13
SHOP EQUIPMENT	1-17
TOOLS	1-19
FASTENERS, MEASUREMENT, AND CONVERSIONS	1-27
SPECIFICATIONS	1-28

2

MAINTENANCE & TUNE-UP

GENERAL INFORMATION	2-2
LUBRICATION	2-5
BOAT MAINTENANCE	2-39
TUNE-UP	2-42
VALVE CLEARANCE	2-85
STORAGE (WHAT TO DO BEFORE & AFTER)	2-101
CLEARING A SUBMERGED MOTOR	2-105
SPECIFICATIONS	2-107

3

FUEL SYSTEM

FUEL SYSTEM BASICS	3-2
FUEL TANK & LINES	3-6
CARBURETED FUEL SYSTEM	3-12
ELECTRONIC FUEL INJECTION SYSTEM	3-33
FUEL PUMP (LOW-PRESSURE) SERVICE	3-116
SPECIFICATIONS	3-32

4

IGNITION & ELECTRICAL SYSTEMS

UNDERSTANDING & TROUBLESHOOTING	
ELECTRICAL SYSTEMS	4-2
IGNITION SYSTEMS	4-8
CHARGING SYSTEMS	4-38
CRANKING (ELECTRIC STARTER) SYSTEM	4-42
ELECTRICAL SWITCH SERVICE	4-67
SPECIFICATIONS	4-69
WIRING DIAGRAMS	4-73

5

LUBRICATION & COOLING

LUBRICATION SYSTEM	5-2
COOLING SYSTEM	5-12
LUBRICATION & COOLING FLOW DIAGRAMS	5-27
SPECIFICATIONS	5-46

CONTENTS

POWERHEAD MECHANICAL 6-2
POWERHEAD REFINISHING 6-111
POWERHEAD BREAK-IN 6-126
SPECIFICATIONS 6-127

POWERHEAD

6

LOWER UNIT 7-2
GEARCASE SERVICE 7-4
GEARCASE EXPLODED VIEWS 7-16
JET DRIVE 7-29

LOWER UNIT

7

MECHANICAL TILT (UNASSISTED OR GAS ASSIST) 8-2
POWER TRIM/TILT SYSTEMS 8-16

TRIM & TILT

8

REMOTE CONTROLS - MECHANICAL UNITS 9-2
REMOTE CONTROLS - DIGITAL THROTTLE & SHIFT (DTS) UNITS 9-15
TILLER HANDLE 9-20
REMOTE CONTROL WIRING

REMOTE CONTROLS

9

HAND REWIND STARTERS 10-2

HAND REWIND STARTER

10

MASTER INDEX 10-12

MASTER INDEX

ALTERNATOR.....	4-40	CARBURETOR - 8/9.9 HP MOTORS.....	3-18
REMOVAL & INSTALLATION.....	4-40	OVERHAUL.....	3-19
A NOTE ABOUT YAMAHA, NISSAN/TOHATSU & MERCURY/MARINER	1-2	REMOVAL & INSTALLATION.....	3-18
ALTERNATOR.....	4-40	CARBURETOR - 15 HP (323cc) MOTORS.....	3-20
REMOVAL & INSTALLATION.....	4-40	GENERAL INFORMATION.....	3-20
ADDITIONAL REMOTE UNITS.....	9-5	OVERHAUL.....	3-21
EXPLODED VIEWS.....	9-6	REMOVAL & INSTALLATION.....	3-20
AIR FILTER.....	2-21	CARBURETOR - 15/20 HP (351cc) MOTORS.....	3-22
GENERAL INFORMATION.....	2-21	GENERAL INFORMATION.....	3-22
SERVICE.....	2-21	OVERHAUL.....	3-23
ANCHORS.....	1-10	REMOVAL & INSTALLATION.....	3-22
ANODES (ZINCS).....	2-34	CARBURETOR - 25 HP (498cc) MOTORScc.....	3-24
INSPECTION.....	2-36	GENERAL INFORMATION.....	3-24
LOCATION & GENERAL INFORMATION.....	2-34	OVERHAUL.....	3-25
SERVICING.....	2-36	REMOVAL & INSTALLATION.....	3-24
AVOIDING THE MOST COMMON MISTAKES.....	1-4	CARBURETOR - 30/40 HP (747cc) MOTORS.....	3-26
AVOIDING TROUBLE.....	1-2	GENERAL INFORMATION.....	3-26
BAILING DEVICES.....	1-10	OVERHAUL.....	3-28
BASIC ELECTRICAL THEORY.....	4-2	REMOVAL & INSTALLATION.....	3-27
HOW DOES ELECTRICITY WORK.....	4-2	CARBURETOR - 75/90 HP (1596cc) MOTORS.....	3-28
OHM'S LAW.....	4-2	CHECKING THE AUTO-ENRICHENER.....	3-31
BATTERY.....		OVERHAUL.....	3-30
CHARGERS.....	4-42	REMOVAL & INSTALLATION.....	3-28
CONSTRUCTION.....	4-41	TPS ADJUSTMENT.....	3-39
LOCATION.....	4-41	CARBURETOR CLEANING & INSPECTION.....	3-31
MAINTENANCE.....	2-40	CARBURETOR SERVICE TIPS.....	3-15
MARINE BATTERIES.....	4-40	CARBURETOR SET-UP.....	3-32
RATINGS.....	4-41	CHARGING CIRCUIT.....	4-38
REPLACING CABLES.....	4-42	CHARGING SYSTEM.....	4-38
SAFETY PRECAUTIONS.....	4-42	ALTERNATOR.....	4-40
STORAGE.....	2-41	BATTERY.....	4-40
TESTING.....	2-41	CHARGING CIRCUIT.....	4-38
BEFORE/AFTER EACH USE.....	2-4	CHARGING SYSTEMS.....	4-38
VISUALLY INSPECTING THE BOAT & MOTOR.....	2-4	CHARGING SYSTEMS.....	4-38
BOAT MAINTENANCE.....	2-39	DESCRIPTION & OPERATION.....	4-38
BATTERIES.....	2-39	TROUBLESHOOTING.....	4-39
FIBERGLASS HULL.....	2-42	CHEMICALS.....	1-17
BOATING EQUIPMENT.....	1-10	CLEANERS.....	1-18
ANCHORS.....	1-10	LUBRICANTS & PENETRANTS.....	1-18
BAILING DEVICES.....	1-10	SEALANTS.....	1-18
COMPASS.....	1-10	CLEARING A SUBMERGED MOTOR.....	2-105
FIRST AID KIT.....	1-10	COMMANDER SIDE MOUNT REMOTE CONTROL BOX.....	9-2
OAR/PADDLE (SECOND MEANS OF PROPULSION).....	1-10	ASSEMBLY.....	9-5
TOOLS & SPARE PARTS.....	1-12	CLEANING & INSPECTING.....	9-4
VHF-FM RADIO.....	1-10	DESCRIPTION & OPERATION.....	9-2
BOATING SAFETY.....	1-4	DISASSEMBLY.....	9-2
COURTESY MARINE EXAMINATIONS.....	1-10	REMOVAL & INSTALLATION.....	9-2
REGULATIONS FOR YOUR BOAT.....	1-4	TROUBLESHOOTING.....	9-2
REQUIRED SAFETY EQUIPMENT.....	1-5	COMPASS.....	1-10
BREAK-IN PROCEDURES.....	6-126	COMPASS PRECAUTIONS.....	1-12
CAMSHAFT POSITION SENSOR.....	3-100	INSTALLATION.....	1-11
TESTING & SERVICE.....	3-100	SELECTION.....	1-10
CAN YOU DO IT?.....	1-2	COMPRESSION TESTING.....	2-44
CARBURETED FUEL SYSTEM.....	3-12	LEAK-DOWN TESTING.....	2-45
CLEANING & INSPECTION.....	3-31	LOW COMPRESSION.....	2-45
DESCRIPTION & OPERATION.....	3-12	TUNE-UP COMPRESSION CHECK.....	2-44
GENERAL INFORMATION.....	3-12	CONNECTING RODS.....	6-115
IDLE MIXTURE ADJUSTMENTS.....	3-16	INSPECTION.....	6-115
SERVICE TIPS.....	3-15	COOLING SYSTEM.....	2-14
TROUBLESHOOTING.....	3-13	FLUSHING JET DRIVES.....	2-16
2.5-6 HP MOTORS.....	3-16	FLUSHING THE SYSTEM.....	2-14
8/9.9 HP MOTORS.....	3-18	COOLING SYSTEM.....	2-14, 5-12
15 HP (323cc) MOTORS.....	3-20	DESCRIPTION & OPERATION.....	5-13
15/20 HP (351cc) MOTORS.....	3-22	FLUSHING JET DRIVES.....	2-16
25 HP (498cc) MOTORS.....	3-24	FLUSHING THE SYSTEM.....	2-14
30/40 HP (747cc) MOTORS.....	3-26	THERMOSTAT.....	5-22
75/90 HP (1596cc) MOTORS.....	3-28	THERMO-SWITCH.....	5-25
CARBURETOR - 2.5-6 HP MOTORS.....	3-16	TROUBLESHOOTING.....	5-14
GENERAL INFORMATION.....	3-16	WATER PUMP.....	5-17
OVERHAUL.....	3-17	COOLING SYSTEM DIAGRAMS.....	5-27
REMOVAL & INSTALLATION.....	3-16	COURTESY MARINE EXAMINATIONS.....	1-10

10-14 MASTER INDEX

CRANKING (ELECTRIC STARTER) SYSTEM	4-42	ELECTRONIC IGNITION SYSTEMS	2-52
STARTER MOTOR	4-57	INSPECTION	2-52
STARTER MOTOR CIRCUIT	4-43	ELECTRONIC FUEL INJECTION SYSTEM	3-33
STARTER MOTOR RELAY/SOLENOID	4-56	CAMSHAFT POSITION SENSOR	3-100
STARTING CIRCUITS	4-42	COMPONENT LOCATIONS	3-102
CRANKSHAFT	6-113	CRANKSHAFT POSITION SENSOR (CPS)	3-92
INSPECTION	6-113	ELECTRIC LOW-PRESSURE FUEL PUMP	3-68
MEASURING BEARING CLEARANCE USING PLASTIGAGE®	6-114	ENGINE CONTROL MODULE (ECM)	3-87
CRANKSHAFT POSITION SENSOR (CPS)	3-92	FUEL DISTRIBUTION MANIFOLD	3-86
CYLINDER BLOCK	6-118	FUEL FLOW SCHEMATICS	3-112
BLOCK & CYLINDER HEAD WARPAGE	6-120	FUEL INJECTION BASICS	3-33
HONING CYLINDER WALLS	6-119	FUEL INJECTORS	3-81
INSPECTION	6-118	FUEL PRESSURE REGULATOR	3-86
CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN)	6-122	FUEL SUPPLY MODULE (FSM) W/LOW & HIGH-PRESSURE FUEL PUMPS	3-78
CHECKING FOR VALVE LEAKAGE	6-122	GENERAL INFORMATION	3-33
CHECKING THE CAMSHAFT	6-122	IDLE AIR CONTROL (IAC) VALVE	3-98
CHECKING THE ROCKER ARMS & SHAFTS	6-123	IDLE SPEED CONTROL (ISC) VALVE	3-98
CHECKING THE VALVE ASSEMBLIES	6-123	MERCURY LARGE-MOTOR EFI - 75/80/90/100/115 HP (1732cc) & ALL 135-350 HP VERADO MOTORS	3-36
DESCRIPTION & OPERATION		MERCURY SMALL-MOTOR EFI - 30/40 HP (747cc) & 40/40J/50/60 HP (996cc) MOTORS	3-35
CARBURETED FUEL SYSTEM	3-12	NEUTRAL OR SHIFT POSITION SWITCHES	3-100
CHARGING SYSTEMS	4-38	NISSAN/TOHATSU EFI - 25/25J/30 HP (526cc) MOTORS	3-36
COOLING SYSTEM	5-13	PRESSURE SENSORS (MAP/MAP-T)	3-96
DIGITAL REMOTES	9-15	PROPULSION CONTROL MODULE (PCM)	3-87
HAND REWIND STARTERS	10-2	PULSER COIL	3-92
IGNITION SYSTEMS	4-8	SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS	3-52
JET DRIVE	7-29	TEMPERATURE SENSORS	3-92
LUBRICATION SYSTEM	5-2	THROTTLE BODY & INTAKE ASSEMBLY	3-53
MECHANICAL REMOTES	9-2	THROTTLE POSITION SENSOR (TPS)	3-89
MECHANICAL TILT	8-2	TROUBLESHOOTING	3-36
OIL PRESSURE SWITCH/SENSOR	5-3	VAPOR SEPARATOR TANK (VST) & HIGH-PRESSURE FUEL PUMP	3-70
POWER TRIM/TILT	8-16	YAMAHA EFI - 75/90 HP (1596cc), 115 HP (1741cc) & 225 HP V6 MOTORS	3-34
STARTER MOTOR	4-57	ELECTRONIC SHIFT CONTROL (ESC)	9-17
STARTER MOTOR RELAY/SOLENOID	4-56	SHIFT ACTUATOR REMOVAL & INSTALLATION	9-17
STARTING CIRCUITS	4-42	135/150/175/200 HP (1732cc) VERADO MOTORS	9-17
TEMPERATURE SENSOR OR SWITCH	4-36	200/225/250/275/300/350 HP (2598cc) VERADO MOTORS	9-18
THERMO-SWITCH	5-25	ELECTRONIC THROTTLE CONTROL (ETC)	9-18
TILLER HANDLE	9-20	ELECTRONIC TOOLS	1-23
DIGITAL REMOTE UNITS	9-18	BATTERY CHARGERS	1-24
EXPLODED VIEWS	9-19	BATTERY TESTERS	1-23
DIRECTIONS & LOCATIONS	1-3	GAUGES	1-24
DRIVE BELT	2-37	MULTI-METERS (DVOMS)	1-24
INSPECTION	2-37	ENGINE CONTROL MODULE (ECM)	3-87
REMOVAL & INSTALLATION	2-38	SERVICE	3-87
EFI COMPONENT LOCATIONS	3-102	ENGINE COVERS	2-12
EFI FUEL FLOW SCHEMATICS	3-112	REMOVAL & INSTALLATION	2-12
ELECTRIC LOW-PRESSURE FUEL PUMP	3-68	ENGINE IDENTIFICATION	2-2
GENERAL INFORMATION	3-68	ENGINE IDS THRU-OUT THIS GUIDE	2-2
REMOVAL & INSTALLATION	3-69	ENGINE MODEL & SERIAL NUMBERS	2-3
TESTING	3-68	ENGINE MAINTENANCE	2-12
ELECTRICAL COMPONENTS	4-2	ANODES (ZINCS)	2-34
GROUND	4-3	AIR FILTER	2-21
LOAD	4-4	COOLING SYSTEM	2-14
POWER SOURCE	4-2	DRIVE BELT	2-37
PROTECTIVE DEVICES	4-3	ENGINE COVERS	2-12
SWITCHES & RELAYS	4-4	ENGINE OIL & FILTER	2-17
WIRING & HARNESSSES	4-4	FUEL FILTER	2-22
ELECTRICAL SWITCH SERVICE	4-67	JET DRIVE IMPELLER	2-33
KILL SWITCH/STOP BUTTON	4-68	PROPELLER	2-27
MERCURY MAIN KEYSWITCHES	4-67	TIMING BELT	2-38
NEUTRAL SAFETY SWITCH	4-68	ENGINE OIL & FILTER	2-17
START BUTTON	4-68	CHECKING OIL LEVEL	2-17
WARNING BUZZER/HORN	4-68	OIL CHANGE & FILTER	2-18
ELECTRICAL SYSTEM CHECKS	2-52	OIL RECOMMENDATIONS	2-17
BATTERY	2-52	EXHAUST GASES	7-3
INTERNAL WIRING HARNESS	2-53	EXHAUST/BLOCK COVERS	6-113
STARTER MOTOR	2-53	INSPECTION	6-113
ELECTRICAL TESTING	4-6		
OPEN CIRCUITS	4-7		
RESISTANCE	4-6		
SHORT CIRCUITS	4-7		
VOLTAGE	4-6		
VOLTAGE DROP	4-6		

FASTENERS, MEASUREMENTS AND CONVERSIONS	1-27	GAS ASSIST DAMPER	8-3
BOLTS, NUTS AND OTHER THREADED RETAINERS	1-27	OVERHAUL - 30/40 HP (747cc) & 40/40J/50/60 HP (996cc)	
STANDARD & METRIC MEASUREMENTS	1-27	REMOVAL & INSTALLATION	8-4
TORQUE	1-27	TESTING	8-3
FIBERGLASS HULL	2-42	GEARCASE EXPLODED VIEWS	7-16
INSPECTION & CARE	2-42	GEARCASE REPAIR & OVERHAUL TIPS	7-4
FIRST AID KIT	1-10	GEARCASE SERVICE	7-4
FLYWHEEL & STATOR COMPONENTS	4-25	CHECKING GEARCASE OIL LEVEL & CONDITION	2-8
CLEANING & INSPECTION	4-32	DRAINING & FILLING	2-9
REMOVAL & INSTALLATION	4-25	GEARCASE REPAIR & OVERHAUL TIPS	7-4
FUEL	3-2	OIL RECOMMENDATIONS	2-8
ALCOHOL-BLENDED FUELS	3-3	2.5/3.5 HP MODELS	7-4
CHECKING FUEL	3-3	4/5/6 HP & 8/9.9 HP (STANDARD THRUST) MODELS	7-5
GENERAL INFORMATION	3-2	8/9.9 HP (BIGFOOT) & 15/20 HP (351cc) MODELS	7-7
HIGH ALTITUDE OPERATION	3-3	15 HP (323cc) MODELS	7-8
OCTANE RATING	3-2	25/30 HP (526CC) MODELS	7-8
RECOMMENDATIONS	3-3	25 HP (498cc - BIGFOOT) & 30/40 HP (747cc - STANDARD	
VAPOR PRESSURE	3-3	THRUST) MODELS W/LIFTING STEPPED SHIFTER	7-10
FUEL DISTRIBUTION MANIFOLD	3-86	30-115 HP MODELS W/ROTATING SHIFTER	7-11
REMOVAL & INSTALLATION	3-86	225 HP V6 MODELS	7-13
FUEL FILTER	2-22	135-350 HP VERADO MODELS	7-14
FUEL FILTER SERVICE (LOW-PRESSURE)	2-22	GENERAL INFORMATION	2-2
FUEL FILTER SERVICE (HIGH-PRESSURE)	2-26	BEFORE/AFTER EACH USE	2-4
FUEL INJECTION BASICS	3-33	ENGINE IDENTIFICATION	2-2
FUEL INJECTORS	3-81	MAINTENANCE EQUALS SAFETY	2-2
GENERAL INFORMATION	3-81	MAINTENANCE COVERAGE IN THIS GUIDE	2-2
REMOVAL & INSTALLATION	3-82	OUTBOARDS ON SAIL BOATS	2-2
TESTING	3-81	HAND REWIND STARTERS	10-2
FUEL LINES & FITTINGS	3-8	DESCRIPTION & OPERATION	10-2
GENERAL INFORMATION	3-8	TROUBLESHOOTING	10-2
SERVICE	3-10	2.5/3.5 HP MOTORS	10-2
TESTING	3-9	4/5/6 HP & 8/9.9 HP MOTORS	10-4
FUEL PRESSURE REGULATOR	3-86	15 HP (323cc) MOTORS	10-6
GENERAL INFORMATION	3-86	15/20 HP (351cc) & 25/25J/30 HP (526cc) MOTORS	10-9
REMOVAL & INSTALLATION	3-87	25 HP (498cc) & 30/40 HP (747cc) MOTORS	10-10
TESTING	3-87	HAND TOOLS	1-19
FUEL PUMP		HAMMERS	1-22
ELECTRIC LOW-PRESSURE	3-68	PLIERS	1-21
FSM w/LOW & HIGH-PRESSURE	3-78	SCREWDRIVERS	1-22
MECHANICAL LOW PRESSURE	3-116	SOCKET SETS	1-19
VST HIGH-PRESSURE	3-70	WRENCHES	1-21
FUEL PUMP (LOW-PRESSURE) SERVICE	3-116	HOW TO USE THIS MANUAL	1-2
GENERAL INFORMATION	3-116	A NOTE ABOUT YAMAHA, NISSAN/TOHATSU AND	
MECHANICAL FUEL PUMPS	3-116	MERCURY/MARINER	1-2
FUEL SUPPLY MODULE (FSM) w/LOW & HIGH-PRESSURE		AVOIDING THE MOST COMMON MISTAKES	1-4
FUEL PUMPS	3-78	AVOIDING TROUBLE	1-2
GENERAL INFORMATION	3-78	CAN YOU DO IT?	1-2
OVERHAUL	3-80	DIRECTIONS & LOCATIONS	1-3
REMOVAL & INSTALLATION	3-79	MAINTENANCE OR REPAIR?	1-2
TESTING	3-78	PROFESSIONAL HELP	1-3
FUEL SYSTEM BASICS	3-2	PURCHASING PARTS	1-3
FUEL	3-2	WHERE TO BEGIN	1-2
FUEL SYSTEM CAUTIONS	3-2	IDLE AIR CONTROL (IAC) VALVE	3-98
FUEL SYSTEM PRESSURIZATION	3-4	GENERAL INFORMATION 30-98	
GENERAL INFORMATION	3-2	REMOVAL & INSTALLATION	3-99
FUEL SYSTEM CAUTIONS	3-2	TESTING	3-99
FUEL SYSTEM CHECKS	2-53	IDLE MIXTURE ADJUSTMENTS	3-16
FUEL INSPECTION	2-53	IDLE SPEED ADJUSTMENT (MINOR ADJUSTMENTS)	2-56
HIGH-PRESSURE EFI FUEL PUMP	2-55	IDLE SPEED CONTROL (ISC) VALVE	3-98
LOW-PRESSURE FUEL PUMP	2-53	GENERAL INFORMATION 30-98	
FUEL SYSTEM PRESSURIZATION	3-4	REMOVAL & INSTALLATION	3-99
GENERAL INFORMATION	3-4	TESTING	3-99
PRESSURIZING	3-5	IGNITION COILS & CDI UNIT	4-33
RELEASING	3-4	REMOVAL & INSTALLATION	4-33
FUEL TANK	3-6	MODELS w/COMBINED CDI UNIT/COIL (2.5/3.5 HP & LATE-	
GENERAL INFORMATION	3-6	MODEL 4/5/6 HP MOTORS)	4-33
SERVICE	3-7	INLINE MOTORS w/CONVENTIONAL IGNITIONS (NON-	
FUEL TANK & LINES	3-6	DIRECT IGNITION MOTORS)	4-34
FUEL LINES & FITTINGS	3-8	225 HP V6 MOTORS	4-35
FUEL TANK	3-6	DIRECT IGNITION MOTORS	4-3
GENERAL INFORMATION	3-6		

10-16 MASTER INDEX

IGNITION SYSTEMS	4-8	MEASURING TOOLS	1-25
FLYWHEEL & STATOR COMPONENTS	4-25	DEPTH GAUGES	1-26
GENERAL INFORMATION	4-8	DIAL INDICATORS	1-25
IGNITION COILS & CDI UNIT	4-33	MICROMETERS & CALIPERS	1-25
TEMPERATURE SENSOR OR SWITCH	4-36	TELESCOPING GAUGES	1-26
TROUBLESHOOTING	4-13	MECHANICAL FUEL PUMPS	3-116
JET DRIVE	7-29	GENERAL INFORMATION	3-116
JET DRIVE	7-29	INSPECTION	3-117
JET DRIVE ADJUSTMENTS	7-36	OVERHAUL	3-119
JET DRIVE	7-29	REMOVAL & INSTALLATION	3-118
ASSEMBLY	7-34	TESTING	3-116
JET DRIVE INSTALLATION	7-36	MECHANICAL TILT (UNASSISTED OR GAS ASSIST)	8-2
SHIMMING JET IMPELLER	7-34	DESCRIPTION & OPERATION	8-2
WATER PUMP ASSEMBLY	7-35	GAS ASSIST DAMPER	8-3
CLEANING & INSPECTION	7-31	INTRODUCTION	8-2
BEARING ASSEMBLY	7-31	SERVICING	8-7
DISASSEMBLING THE BEARING CARRIER	7-38	NEUTRAL OR SHIFT POSITION SWITCHES	3-100
DISASSEMBLING THE DRIVESHAFT	7-33	TESTING & SERVICE	3-100
DRIVESHAFT & ASSOCIATED PARTS	7-33	NEUTRAL SAFETY SWITCH	4-68
JET IMPELLER	7-34	TESTING	4-68
REVERSE GATE	7-33	OAR/PADDLE (SECOND MEANS OF PROPULSION)	1-10
WATER PUMP	7-34	OIL PRESSURE	5-2
DESCRIPTION & OPERATION	7-29	TESTING	5-2
REMOVAL & DISASSEMBLY	7-29	OIL PRESSURE SWITCH/SENSOR	5-3
JET DRIVE ADJUSTMENTS	7-36	DESCRIPTION & OPERATION	5-3
GATE LINKAGE	7-36	REMOVAL & INSTALLATION	5-5
GATE	7-36	TESTING	5-3
REMOTE CABLE	7-37	SENSORS ON INLINE MODELS	5-4
TILLER SHIFT ROD	7-38	SENSORS ON V6 MODELS	5-4
TRIM	7-38	SWITCHES	5-3
JET DRIVE BEARING	2-9	OIL PUMP	5-5
DAILY BEARING LUBRICATION	2-10	REMOVAL, OVERHAUL & INSTALLATION	5-6
GREASE REPLACEMENT	2-10	4/5/6 HP MOTORS	5-6
RECOMMENDED LUBRICANT	2-10	8-60 HP MOTORS	5-7
JET DRIVE IMPELLER	2-33	75-115 HP MOTORS	5-9
CHECKING CLEARANCE	2-34	135/150/175/200 HP (1732cc) VERADO MOTORS	5-9
INSPECTION	2-33	225 HP V6 MOTORS	5-10
KILL SWITCH/STOP BUTTON	4-68	200/225/250/275/300/350 HP (2598cc) VERADO MOTORS	5-11
TESTING	4-68	OTHER COMMON TOOLS	1-22
LOWER UNIT	7-2	OUTBOARDS ON SAIL BOATS	2-2
EXHAUST GASES	7-3	PISTONS	6-116
GENERAL INFORMATION	7-2	INSPECTION	6-116
SHIFTING PRINCIPLES	7-2	OVERSIZE PISTONS & RINGS	6-118
TROUBLESHOOTING	7-3	PISTON RING SIDE CLEARANCE	6-118
LUBRICANTS	2-5	RING END-GAP CLEARANCE	6-117
ALL PURPOSE MARINE GREASE	2-5	POWERHEAD BREAK-IN	6-126
GEARCASE LUBRICANT	2-6	BREAK-IN PROCEDURES	6-126
POWER STEERING FLUID	2-6	POWERHEAD MECHANICAL	6-2
POWER TRIM & TILT FLUID	2-6	GENERAL INFORMATION	6-2
LUBRICATING THE MOTOR	2-6	2.5/3.5 HP POWERHEADS	6-4
LUBRICATION	2-5	4/5/6 HP POWERHEADS	6-9
GEARCASE (LOWER UNIT) OIL	2-7	8/9.9 HP & 15/20 HP (351cc) POWERHEADS	6-15
JET DRIVE BEARING	2-9	15 HP (323c) POWERHEADS	6-26
LUBRICANTS	2-5	25 HP (498cc) POWERHEADS	6-34
LUBRICATING THE MOTOR	2-6	25/25J/30 HP (526cc) POWERHEADS	6-43
LUBRICATION INSIDE THE BOAT	2-7	30/40 HP (747cc) POWERHEADS	6-50
POWER STEERING RESERVOIR	2-11	40/40J/50/60 HP (996cc) POWERHEADS	6-59
POWER TRIM/TILT RESERVOIR	2-10	75/90 HP (1596cc) AND 115 HP (1741cc) POWERHEADS	6-69
LUBRICATION	2-5	75/80/90/100/115 HP (1732cc) & ALL 135-350 HP (1732cc/ 2598cc)	
LUBRICATION INSIDE THE BOAT	2-7	VERADO POWERHEADS	6-81
LUBRICATION SYSTEM	5-2	225 HP V6 POWERHEADS	6-99
DESCRIPTION & OPERATION	5-2	POWERHEAD REFINISHING	6-111
OIL PRESSURE	5-2	CONNECTING RODS	6-115
OIL PRESSURE SWITCH/SENSOR	5-3	CRANKSHAFT	6-113
OIL PUMP	5-5	CYLINDER BLOCK	6-118
LUBRICATION SYSTEM DIAGRAMS	5-37	CYLINDER HEAD COMPONENTS (CAMSHAFT/VALVE TRAIN)	6-122
LUBRICATION & COOLING FLOW DIAGRAMS	5-27	EXHAUST/BLOCK COVERS	6-113
COOLING SYSTEM DIAGRAMS	5-27	GENERAL INFORMATION	6-111
LUBRICATION SYSTEM DIAGRAMS	5-37	PISTONS	6-116
MAINTENANCE COVERAGE IN THIS GUIDE	2-2	POWER STEERING RESERVOIR	2-11
MAINTENANCE EQUALS SAFETY	2-2	CHECKING FLUID LEVEL/CONDITION	2-11
MAINTENANCE OR REPAIR?	1-2	RECOMMENDED LUBRICANT	2-11
MANUAL PTT OPERATION	8-23	POWER TRIM/TILT RESERVOIR	2-10

CHECKING FLUID LEVEL/CONDITION	2-10	SAFETY IN SERVICE	1-13
RECOMMENDED LUBRICANT	2-10	DO'S	1-13
POWER TRIM/TILT SYSTEMS	8-16	DON'TS	1-13
BLEEDING/PURGING AIR FROM THE SYSTEM	8-23	SAFETY TOOLS	1-17
DESCRIPTION & OPERATION	8-16	EYE & EAR PROTECTION	1-17
INTRODUCTION	8-16	WORK CLOTHES	1-17
MANUAL PTT OPERATION	8-23	WORK GLOVES	1-17
PTT ASSEMBLY	8-24	SENSOR & CIRCUIT RESISTANCE/OUTPUT TESTS	3-52
TROUBLESHOOTING	8-17	SHOP EQUIPMENT	1-17
PRESSURE SENSORS (MAP/MAP-T)	3-96	CHEMICALS	1-17
GENERAL INFORMATION	3-96	SAFETY TOOLS	1-17
REMOVAL & INSTALLATION	3-98	SPARK PLUG WIRES	2-50
TESTING	3-97	REMOVAL & INSTALLATION	2-52
PROFESSIONAL HELP	1-3	TESTING	2-50
PROPELLER	2-27	SPARK PLUGS	2-46
GENERAL INFORMATION	2-27	HEAT RANGE	2-46
INSPECTION	2-29	INSPECTION & GAPPING	2-49
REMOVAL & INSTALLATION	2-30	READING SPARK PLUGS	2-49
2.5/3.5 HP MOTORS	2-30	REMOVAL & INSTALLATION	2-47
4 HP & LARGER MODELS	2-31	SPECIAL TOOLS	1-23
PROPULSION CONTROL MODULE (PCM)	3-87	SPECIFICATIONS	
SERVICE	3-87	BOLT TORQUE - TYPICAL METRIC	1-28
PTT ASSEMBLY	8-24	BOLT TORQUE - TYPICAL U.S. STANDARD	1-28
OVERHAUL	8-29	CAPACITIES	2-109
8/9.9 HP MOTORS & 15/20 HP (351cc) MOTORS	8-29	CARBURETOR SET-UP	3-32
15 HP (323cc) MOTORS	8-29	CHARGE & PRIMARY COIL OUTPUT TESTING - INLINE ENGINES	4-72
25/25J/30 HP (526cc) MOTORS	8-29	CHARGING SYSTEM TESTING	4-73
25 HP (498cc), 30 HP (747cc) & ALL 40-115 MOTORS	8-32	CONVERSION FACTORS	1-28
135/150/175/200 HP (1732cc) VERADO MOTORS	8-36	COOLING SYSTEM	5-46
225 HP V6 MOTORS	8-37	EFI SENSOR TESTING	3-122
200/225/250/275/300/350 HP (2598cc) VERADO MOTORS	8-40	ENGINE	6-127
REMOVAL & INSTALLATION	8-24	2.5/3.5 HP	6-127
8/9.9 HP, 15/20 HP (351cc) & 25/25J/30 HP (526cc) MOTORS	8-24	4/5/6 HP	6-127
15 HP (323cc) MOTORS	8-25	8/9.9 HP	6-128
25 HP (498cc), 30 HP (747cc) & ALL 40-115 HP MOTORS	8-25	15 HP (323cc)	6-129
135/150/175/200 HP (1732cc) VERADO MOTORS	8-27	15/20 HP (351cc)	6-130
225 HP V6 MOTORS	8-28	25 HP (498cc)	6-131
200/225/250/275/300/350 HP (2598cc) VERADO MOTORS	8-28	25/25J/30 (526cc) HP	6-132
PULSER COIL	3-92	30/40 HP (747cc)	6-133
PURCHASING PARTS	1-3	40/40J/50/60 HP (996cc)	6-135
RE-COMMISSIONING	2-104	CARB 75/90 HP (1596cc)	6-136
REMOVAL FROM STORAGE	2-104	EFI 75/90 HP (1596cc)	6-137
READING TROUBLE CODES	3-37	115 HP (1741cc)	6-139
REGULATIONS FOR YOUR BOAT	1-4	75, 80, 90, 100, 115 HP (1732cc)	6-141
CAPACITY INFORMATION	1-5	135, 150, 175, 200 HP (1732cc) VERADO	6-141
CERTIFICATE OF COMPLIANCE	1-5	200, 225, 250, 275, 300, 350 HP (2598cc) VERADO	6-143
DOCUMENTING OF VESSELS	1-4	225 HP (3352cc)	6-144
HULL IDENTIFICATION NUMBER	1-4	GENERAL ENGINE	2-107
LENGTH OF BOATS	1-5	IGNITION COMPONENT TESTING - 1-CYL MODELS	4-69
NUMBERING OF VESSELS	1-4	IGNITION COMPONENT TESTING - INLINE ENGINES	4-70
REGISTRATION OF BOATS	1-4	IGNITION COMPONENT TESTING - V-ENGINES	4-72
SALES & TRANSFERS	1-4	LUBRICATION CHART	2-109
VENTILATION	1-5	MAINTENANCE INTERVALS	2-108
VENTILATION SYSTEMS	1-5	SPARK PLUG DIAGNOSIS	2-112
REMOTE CONTROL WIRING	9-26	TUNE-UP	2-110
REMOTE CONTROLS - DIGITAL THROTTLE & SHIFT (DTS) UNITS	9-15	VALVE CLEARANCE	2-111
DESCRIPTION & OPERATION	9-15	START BUTTON	4-68
DIGITAL REMOTE UNITS	9-18	TESTING	4-68
ELECTRONIC SHIFT CONTROL (ESC)	9-17	STARTER MOTOR	4-57
ELECTRONIC THROTTLE CONTROL (ETC)	9-18	DESCRIPTION	4-57
REMOTE CONTROLS - MECHANICAL UNITS	9-2	EXPLODED VIEWS	4-61
ADDITIONAL REMOTE UNITS	9-5	OVERHAUL	4-64
COMMANDER SIDE MOUNT REMOTE CONTROL BOX	9-2	REMOVAL & INSTALLATION	4-58
REMOTE (SHIFT & THROTTLE) CABLES	9-15	STARTER MOTOR CIRCUIT	4-43
REMOTE (SHIFT & THROTTLE) CABLES	9-15	TROUBLESHOOTING	4-43
RIGGING & MEASUREMENT FOR REPLACEMENT	9-15	STARTER MOTOR RELAY/SOLENOID	4-56
REQUIRED SAFETY EQUIPMENT	1-5	DESCRIPTION & OPERATION	4-56
FIRE EXTINGUISHERS	1-6	TESTING & SERVICE	4-56
PERSONAL FLOTATION DEVICES	1-7	STARTING CIRCUITS	4-42
SOUND PRODUCING DEVICES	1-9	DESCRIPTION & OPERATION	4-42
TYPES OF FIRES	1-5	FAULTY SYMPTOMS	4-43
VISUAL DISTRESS SIGNALS	1-9	MAINTENANCE	4-43
WARNING SYSTEM	1-7	STORAGE (WHAT TO DO BEFORE & AFTER)	2-101

10-18 MASTER INDEX

RE-COMMISSIONING	2-104	TROUBLESHOOTING	
WINTERIZATION	2-101	BASIC OPERATING PRINCIPLES	1-13
TEMPERATURE SENSOR OR SWITCH	4-36	2-STROKE MOTORS	1-14
DESCRIPTION & OPERATION	4-36	4-STROKE MOTORS	1-16
SENSOR CHECK	4-36	COMBUSTION	1-16
SENSOR RESISTANCE	4-37	CARBURETOR FUEL SYSTEM	3-13
TEST EQUIPMENT	4-4	COOLING SYSTEM	5-14
JUMPER WIRES	4-4	EFI	3-36
MULTI-METERS	4-5	ELECTRICAL SYSTEMS	4-6
TEST LIGHTS	4-5	HAND REWIND STARTERS	10-2
THERMOSTAT	5-22	IGNITION & CHARGING SYSTEMS	4-13
EXPLODED VIEWS	5-24	LOWER UNIT	7-3
REMOVAL & INSTALLATION	5-22	MECHANICAL REMOTE CONTROLS	9-2
THERMO-SWITCH	5-25	POWER TRIM/TILT	8-17
CHECKING CONTINUITY	5-26	STARTER MOTOR CIRCUIT	4-43
DESCRIPTION & OPERATION	5-25	TILLER HANDLE	9-20
OPERATIONAL CHECK	5-26	TUNE-UP	2-42
THROTTLE BODY & INTAKE ASSEMBLY	3-53	CHECKING/CLEANING THE CARBURETORS OR THROTTLE BODIES	2-55
GENERAL INFORMATION	3-53	COMPRESSION TESTING	2-44
REMOVAL & INSTALLATION	3-53	ELECTRICAL SYSTEM CHECKS	2-52
THROTTLE POSITION SENSOR (TPS)	3-89	ELECTRONIC IGNITION SYSTEMS	2-52
GENERAL INFORMATION	3-89	FUEL SYSTEM CHECKS	2-53
TESTING & SERVICE	3-89	IDLE SPEED ADJUSTMENT (MINOR ADJUSTMENTS)	2-56
TILLER HANDLE	9-20	INTRODUCTION	2-42
DESCRIPTION & OPERATION	9-20	SPARK PLUG WIRES	2-50
TILLER HANDLE	9-20	SPARK PLUGS	2-46
TROUBLESHOOTING	9-20	TUNE-UP SEQUENCE	2-42
TILLER HANDLE	9-20	TUNE-UP SEQUENCE	2-42
REMOVAL & INSTALLATION	9-20	UNDERSTANDING & TROUBLESHOOTING ELECTRICAL SYSTEMS	4-2
2.5/3.5 HP MOTORS	9-20	BASIC ELECTRICAL THEORY	4-2
4/5/6 HP MOTORS	9-21	ELECTRICAL COMPONENTS	4-2
8/9.9 HP MOTORS	9-21	ELECTRICAL TESTING	4-6
15 HP (323cc) MOTORS	9-22	PRECAUTIONS	4-8
15/20 HP (351cc) MOTORS	9-22	TEST EQUIPMENT	4-4
25/25J/30 HP (526cc) MOTORS	9-23	TROUBLESHOOTING	4-6
25 HP (498cc), 30/40 HP (747cc) AND 40/40J/50/60 HP (996cc) MOTORS	9-25	WIRE & CONNECTOR REPAIR	4-8
TIMING BELT	2-38	VALVE CLEARANCE	2-85
INSPECTON	2-38	VALVE LASH	2-85
TIMING & SYNCHRONIZATION	2-56	VALVE LASH	2-85
GENERAL INFORMATION	2-56	ADJUSTMENT	2-86
PREPPING THE MOTOR	2-57	2.5/3.5 HP MOTORS	2-86
SYNCHRONIZATION	2-57	4/5/6 HP MOTORS	2-86
TIMING	2-57	8/9.9 HP & 15/20 HP (351cc) MOTORS	2-87
2.5/3.5 HP MOTORS	2-57	15 HP (323cc) & 25 HP (498cc) MOTORS	2-89
4/5/6 HP MOTORS	2-59	25/25J/30 HP (526cc) MOTORS	2-90
8/9.9 HP MOTORS	2-60	30/40 HP (747cc) MOTORS	2-91
15 HP (323CC) MOTORS	2-63	40/40J/50/60 HP (996cc) MOTORS	2-92
15/20 HP (351CC) MOTORS	2-64	75/90 HP (1596cc) & 115 HP (1741cc) MOTORS	2-94
25 HP (498CC) MOTORS	2-67	225 HP V6 MOTORS	2-96
25/25J/30 HP (526CC) MOTORS	2-68	75/80/90/100/115 HP (1732cc) MOTORS & 135-350 HP VERADO MOTORS	2-98
30/40 HP (747CC) CARBURETED MOTORS	2-70	VAPOR SEPARATOR TANK (VST) & HIGH-PRESSURE FUEL PUMP	3-70
30/40 HP (747CC) EFI MOTORS & 40/40J/50/60 HP (996CC) EFI MOTORS	2-72	GENERAL INFORMATION	3-70
75/90 HP (1596CC) CARBURETED MOTORS	2-74	OVERHAUL	3-75
75/90 HP (1596CC) EFI MOTORS	2-76	REMOVAL & INSTALLATION	3-70
115 HP (1741CC) MOTORS	2-78	TESTING	3-70
75/80/90/100/115 HP (1732CC) MOTORS	2-81	VHF-FM RADIO	1-10
225 HP V6 MOTORS	2-82	WARNING BUZZER/HORN	4-68
135-350 HP VERADO MOTORS	2-84	TESTING	4-68
TOOLS	1-19	WATER PUMP	5-17
ELECTRONIC TOOLS	1-23	EXPLODED VIEWS	5-20
HAND TOOLS	1-19	INSPECTION & OVERHAUL	5-19
MEASURING TOOLS	1-25	REMOVAL & INSTALLATION	5-17
OTHER COMMON TOOLS	1-22	WHERE TO BEGIN	1-2
SPECIAL TOOLS	1-23	WINTERIZATION	2-101
TOOLS & SPARE PARTS	1-12	PREPPING FOR STORAGE	2-101
		STORAGE CHECKLIST	2-102
		THE GREAT ETHANOL DEBATE	2-101
		WHERE TO STORE YOUR BOAT & MOTOR	2-101
		WIRE & CONNECTOR REPAIR	4-8

<p>WIRING DIAGRAMS 4-73</p> <p>INDEX 4-73</p> <p>2.5/3.5 HP POWERHEADS 6-4</p> <p>CLEANING & INSPECTION 6-9</p> <p>DISASSEMBLY & ASSEMBLY 6-4</p> <p>REMOVAL & INSTALLATION 6-4</p> <p>4/5/6 HP POWERHEADS 6-9</p> <p>CLEANING & INSPECTION 6-15</p> <p>CYLINDER BLOCK OVERHAUL 6-12</p> <p>CYLINDER HEAD OVERHAUL 6-11</p> <p>CYLINDER HEAD REMOVAL & INSTALLATION 6-10</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-9</p> <p>8/9.9 HP & 15/20 HP (351cc) POWERHEADS 6-15</p> <p>CLEANING & INSPECTION 6-26</p> <p>CYLINDER BLOCK OVERHAUL 6-22</p> <p>CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION 6-19</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-15</p> <p>STRIPPING THE POWERHEAD FOR DISASSEMBLY 6-17</p> <p>15 HP (323c) POWERHEADS 6-26</p> <p>CLEANING & INSPECTION 6-34</p> <p>CYLINDER BLOCK OVERHAUL 6-31</p> <p>CYLINDER HEAD OVERHAUL 6-30</p> <p>CYLINDER HEAD REMOVAL & INSTALLATION 6-29</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-26</p> <p>TIMING BELT/SPROCKET REMOVAL & INSTALLATION 6-27</p> <p>25 HP (498cc) POWERHEADS 6-34</p> <p>CLEANING & INSPECTION 6-43</p> <p>CYLINDER BLOCK OVERHAUL 6-39</p> <p>CYLINDER HEAD OVERHAUL 6-38</p> <p>CYLINDER HEAD REMOVAL & INSTALLATION 6-36</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-34</p> <p>TIMING BELT/SPROCKET REMOVAL & INSTALLATION 6-35</p> <p>25/25J/30 HP (526cc) POWERHEADS 6-43</p> <p>CLEANING & INSPECTION 6-50</p> <p>CYLINDER BLOCK OVERHAUL 6-47</p> <p>CYLINDER HEAD REMOVAL, OVERHAUL & INSTALLATION 6-45</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-43</p> <p>STRIPPING THE POWERHEAD FOR DISASSEMBLY 6-44</p>	<p>30/40 HP (747cc) POWERHEADS 6-50</p> <p>CLEANING & INSPECTION 6-59</p> <p>CYLINDER BLOCK OVERHAUL 6-56</p> <p>CYLINDER HEAD OVERHAUL 6-55</p> <p>CYLINDER HEAD REMOVAL & INSTALLATION 6-53</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-50</p> <p>TIMING BELT/SPROCKET REMOVAL & INSTALLATION 6-52</p> <p>40/40J/50/60 HP (996cc) POWERHEADS 6-59</p> <p>CLEANING & INSPECTION 6-68</p> <p>CYLINDER BLOCK OVERHAUL 6-65</p> <p>CYLINDER HEAD OVERHAUL 6-64</p> <p>CYLINDER HEAD REMOVAL & INSTALLATION 6-62</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-59</p> <p>TIMING BELT/SPROCKET REMOVAL & INSTALLATION 6-60</p> <p>75/90 HP (1596cc) AND 115 HP (1741cc) POWERHEADS 6-69</p> <p>CLEANING & INSPECTION 6-80</p> <p>CYLINDER BLOCK OVERHAUL 6-77</p> <p>CYLINDER HEAD REMOVAL & INSTALLATION 6-73</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-69</p> <p>TIMING BELT/SPROCKET REMOVAL & INSTALLATION 6-71</p> <p>VALVE TRAIN OVERHAUL 6-76</p> <p>75/80/90/100/115 HP (1732cc) &</p> <p>ALL 135-350 HP (1732cc/ 2598cc) VERADO POWERHEADS 6-81</p> <p>CLEANING & INSPECTION 6-98</p> <p>CYLINDER BLOCK OVERHAUL 6-94</p> <p>CYLINDER HEAD OVERHAUL 6-93</p> <p>CYLINDER HEAD/TIMING CHAIN REMOVAL & INSTALLATION 6-90</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-81</p> <p>STRIPPING THE POWERHEAD FOR OVERHAUL 6-87</p> <p>225 HP V6 POWERHEADS 6-99</p> <p>CLEANING & INSPECTION 6-111</p> <p>CYLINDER BLOCK OVERHAUL 6-106</p> <p>CYLINDER HEAD REMOVAL & INSTALLATION 6-103</p> <p>POWERHEAD REMOVAL & INSTALLATION 6-99</p> <p>TIMING BELT/SPROCKET REMOVAL & INSTALLATION 6-100</p> <p>VALVE TRAIN OVERHAUL 6-106</p>
---	--